



HEADSET DATASHEET

XT-03



Call Center Headset

Headset

- Office&Call Center Headset
- Noise Cancelling Microphone with Foam Protector
- Built-to-last Durability
- Hearing protection technology

Technical Specification

- Receiving Type: Dynamic moving coil
- Connection type: Quick Disconnect
- Microphone Type: ECM
- Microphone Directivity: Cardioid
- Wearing Style: Adjustable headband
- Microphone Boom: 300° adjustable
- Joint of speaker and headband(Mono/DUO): 90° rotatable
- Storage Temperature: -40°C~70°C
- Frequency: 300~3.4 kHz
- Speaker Impedance(Mono/DUO): 150Ω±15%/300Ω±15%
- Speaker Sensitivity@ 1kHz (Mono/DUO): 103±3dB/98±3dB
- Microphone Sensitivity @ 1kHz: -41±3 dB
- Warranty: Two years
- Weight(Mono/DUO): 160g/184g
- What's in the box: Headset, Spare ear cushion, User guide, Clothing clip





XT-03



Headset Components


- 1 Receiver
- 2 Flexible microphone boom
- 3 Ear cushion
- 4 Click-stop headband
- 5 T-bar (Monaural only)
- 6 Clothing clip
- 7 Quick Disconnect
- 8 Noise-canceling microphone and windscreen

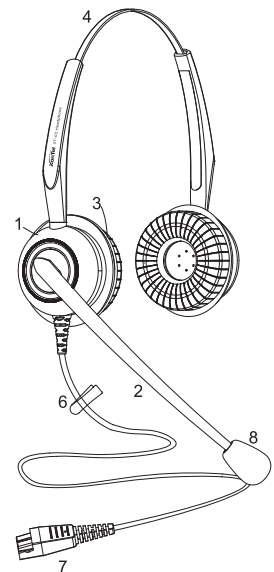

Wearing Your Headset






1. To wear the headband, put the headset on with the receiver(s) covering your ear(s). For monoaural headsets, position the stabilizer above your ear. Adjust the length of the headband.

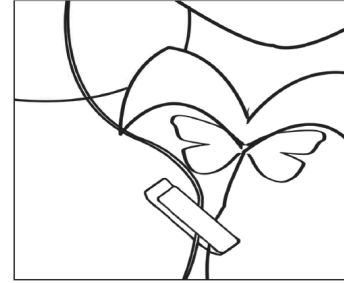

Using Your Headset




2. To change ears, rotate the microphone boom over the headband to accommodate the left or right ear.

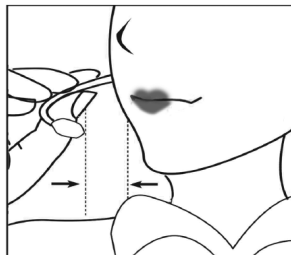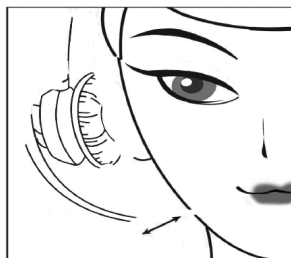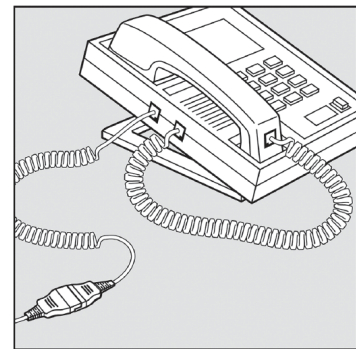



3. For fixed boom headsets, position the SoundTube filter close to your mouth. For flexible boom headsets, position the microphone 1/2" from your lower lip.

Ear Cushion Removal

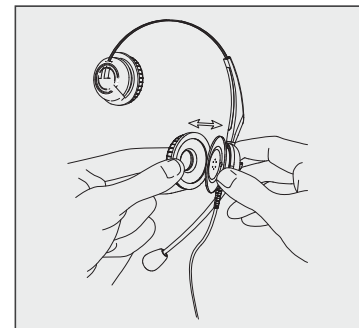

Maintenance

4. Fasten the clothing clip.
5. If your telephone has a headset port, insert the modular plug of the Quick Disconnect coil cord into the headset port.
6. Using both thumbs, remove the ear cushion by gently prying the earplate away from the groove on the receiver.

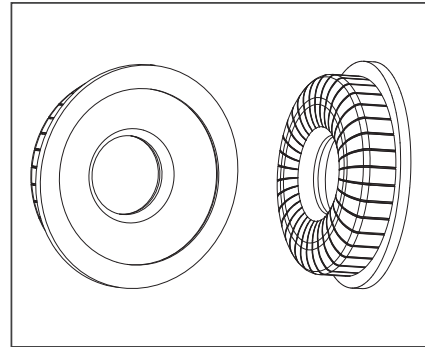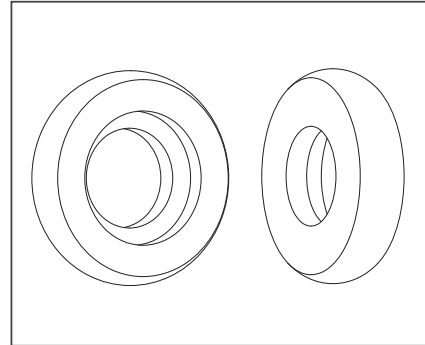

Accessories

7. The ear cushions can be removed for cleaning or replacement.
8. Replacements & enhancements for the XonTel.
 - 1 Foam microphone windscreen
 - 2 Headset hook
 - 3 SoundTube filter
 - 4 Clothing clip
 - 5 Leatherette ear cushion
 - 6 Foam ear cushion

